




EMS215ic, EMP215ic, EM215ic

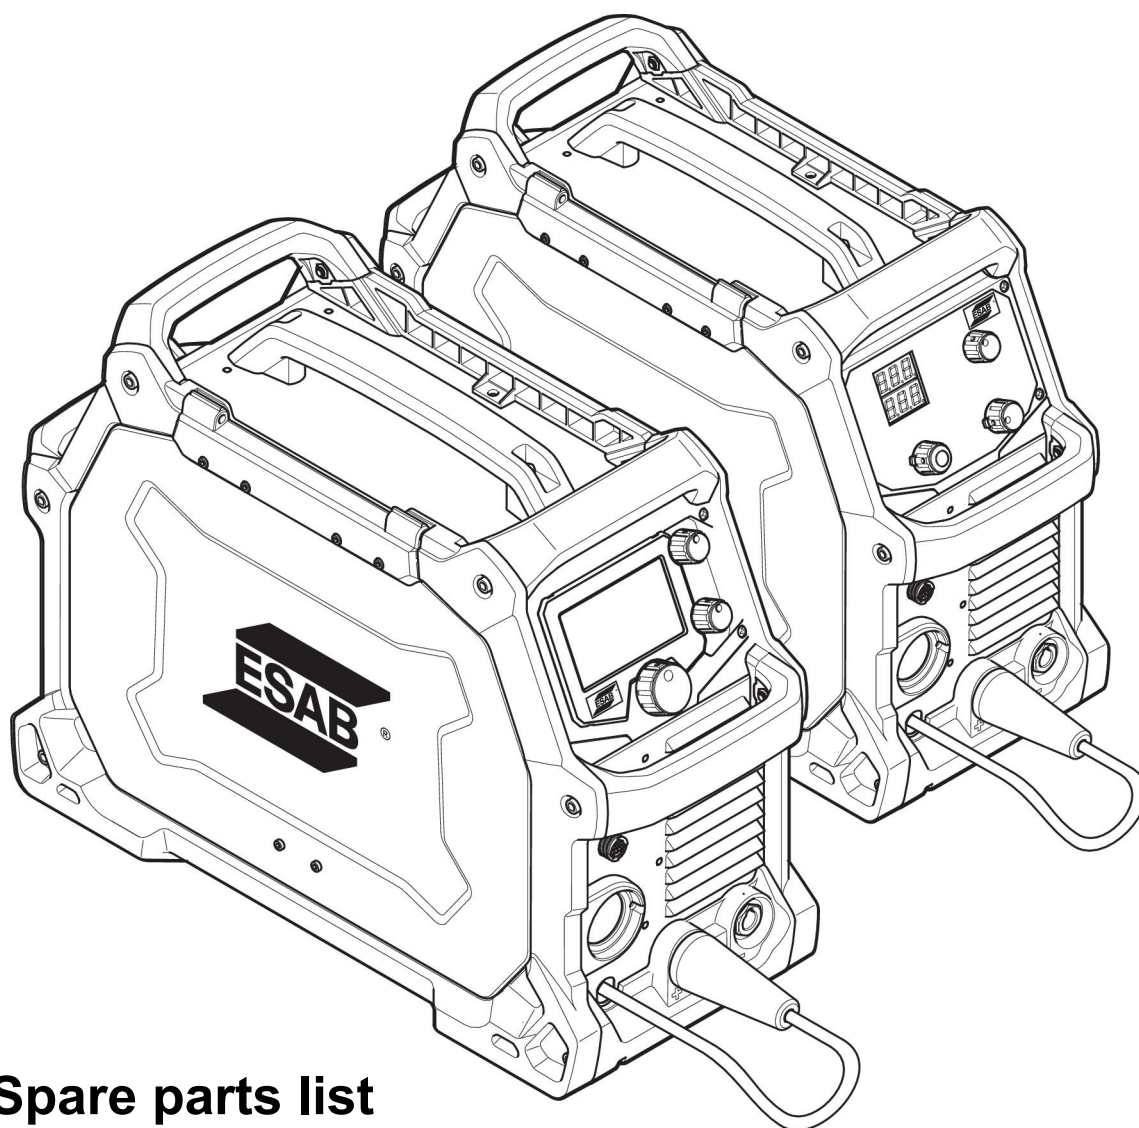

Spare parts list

Ordering number	Product	Notes
0558 102 239	EMS 215ic	Bobbin Ø4-8" (100-200 mm). CSA/Bayonet
0558 102 240	EMP 215ic	Bobbin Ø4-8" (100-200 mm). CSA/Bayonet
0558 102 436	EM 215ic	Bobbin Ø4-8" (100-200 mm). CSA/Bayonet
0700 300 985	EMP 215ic	Bobbin Ø100-200 mm (4-8") CE, euro connection

Spare parts are to be ordered through the nearest ESAB agency. Kindly indicate type of unit, serial number, denominations and ordering numbers according to the spare parts list.

Maintenance and repair work should be performed by an experienced person, and electrical work only by a trained electrician. Use only recommended spare parts.


SPARE PARTS	4
Housing	4
Connections including drive system.....	6
User interface	8
Control modules	10
WEAR PARTS - CSA.....	12
WEAR PARTS - CE	13

SPARE PARTS

Housing

C = Component designation in circuit diagram


Item	Qty	Ordering no.	Denomination	Notes	C
1	1	0558 102 397	Side frame, left		
2	1	0558 102 398	Side frame, right		
3	4	0558 102 399	Handle		
4	1	0558 102 400	Top handle		
5	2		Screw		
6	1	0558 102 401	Side panel, left	CSA, with ESAB logo and welding decal	
	1	0464 581 001	Side panel, left	CE, with ESAB logo and welding decal	
7	1	0558 102 402	Front foot	With decals	
8	1	0558 102 403	Rear foot		
9	1	0558 102 404	Side panel right	CSA, with ESAB logo	
	1	0464 582 001	Side panel right	CE, with ESAB logo	
10	1	0558 102 406	Hinge		
11	4		Screw	M4 × 8 mm	
12	4		Nut	M4 × 0.7 mm	
13	4		Washer	M4	
14	2	0558 102 407	Hinge pin		
15	1	0558 102 405	Roller latch assembly		
16	2		Screw	M6 × 180 mm	
17	8		Screw	M6 × 20 mm	
18	6		Screw	M4 × 10 mm	
19	4		Screw	M6 × 20 mm	
20	2		Sex bolt	M6	
21	8		Nut	M6	

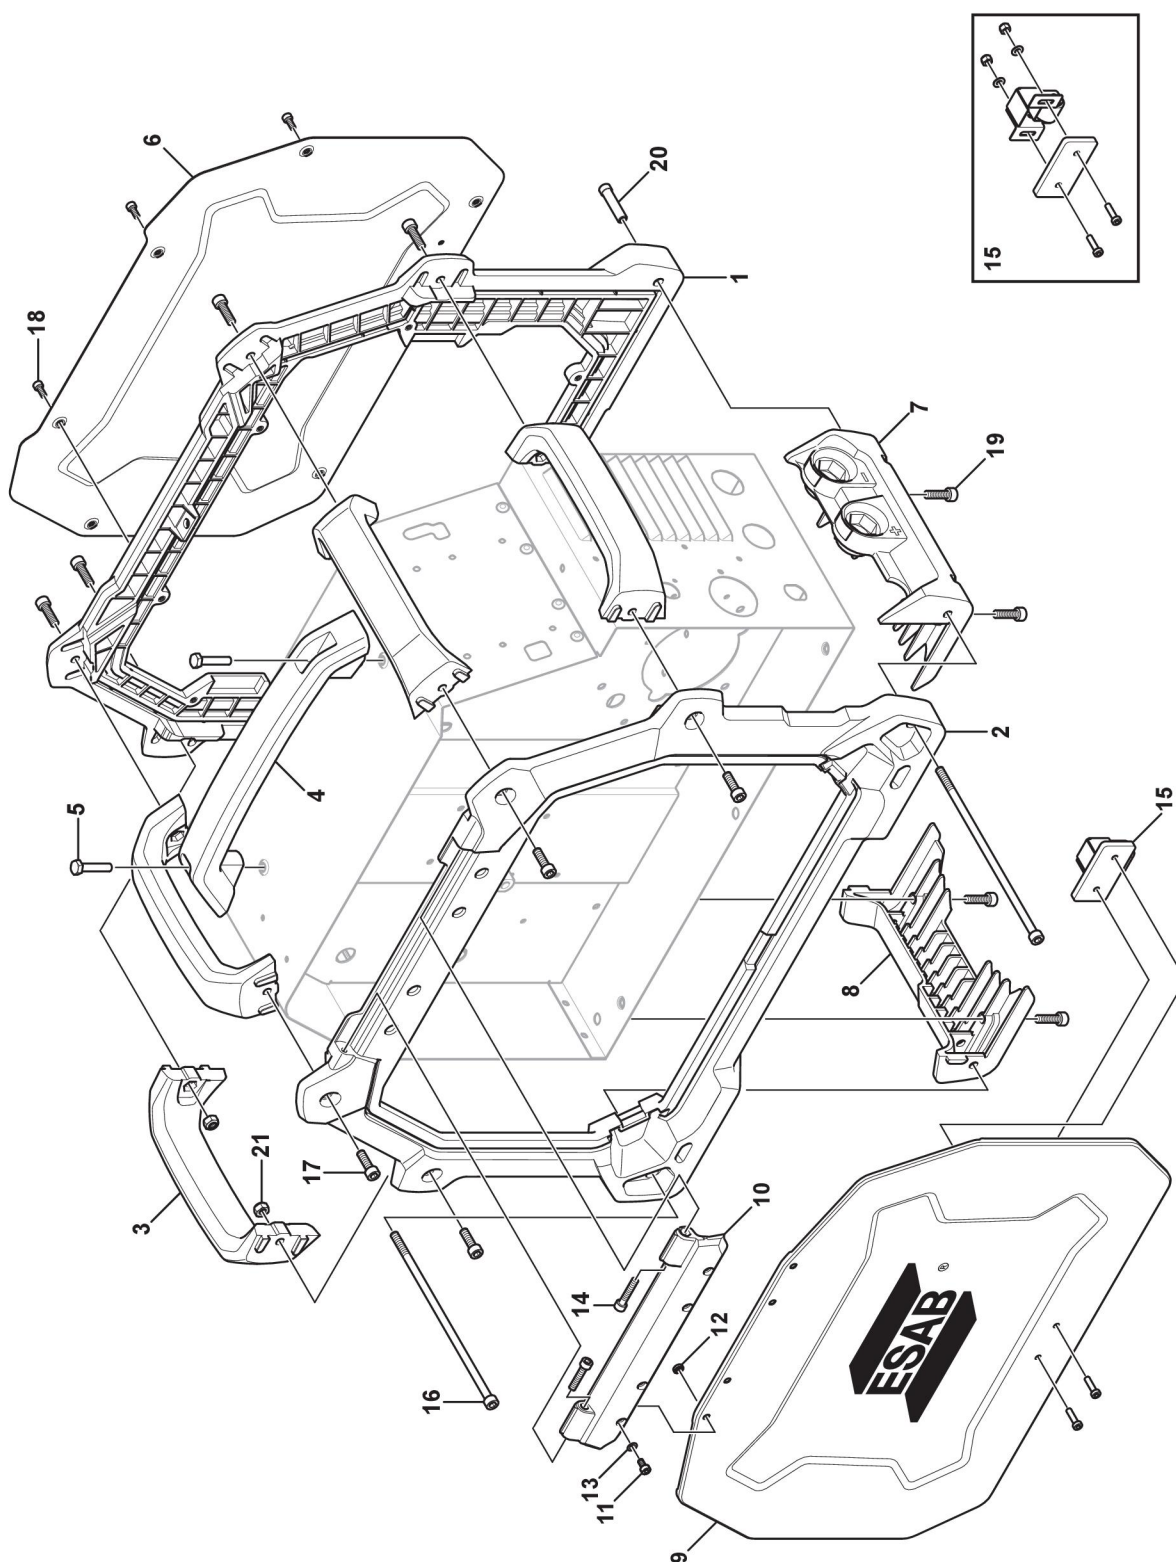

Connections including drive system

C = Component designation in circuit diagram

Item	Qty	Ordering no.	Denomination	Notes	C
1	1	0558 102 408	Wire feeder mechanism	CSA, including motor and harness	
	1	0464 583 880	Wire feeder mechanism	CE, including motor and harness	
2	1		Screw	M5 × 16 mm	
3	1	0558 102 409	Remote connection outlet with harness	8-pin connector	
4	2		Nut	M3 × 0.5 mm	
5	1	0558 102 410	Brake hub nut		
6	1	0558 102 411	Brake hub kit		
7	1	0558 102 412	Solenoid assembly with hoses	With gas valve, hose clamps and hoses	
8	1	0558 102 413	Bracket for solenoid valve		
9	2		Screw	M4 × 10 mm	
10	1	0558 102 414	Gas connector	CSA	
	1	0464 587 880	Gas connector	CE	
11	1	0558 102 415	Main supply switch		
12	1	0558 102 416	Circuit breaker		
13	1	0558 102 417	Current sensor		
14	1		Screw	M3 × 8 mm	
15	2	0558 102 418	OKC contact female		
16	1	0558 102 419	Polarity changeover cable complete		
17	2	0558 102 420	Fan + wire harness	Including wire harness	
18	1	0558 102 421	Fan protection foam		
19	1	0464 588 880	Euro connection with harness	CE only	
20	1	0464 589 880	EMI PCB assembly incl. wire harness	CE only	
21	1	0558 102 442	Warning pinch-shock label	Not included in illustration	

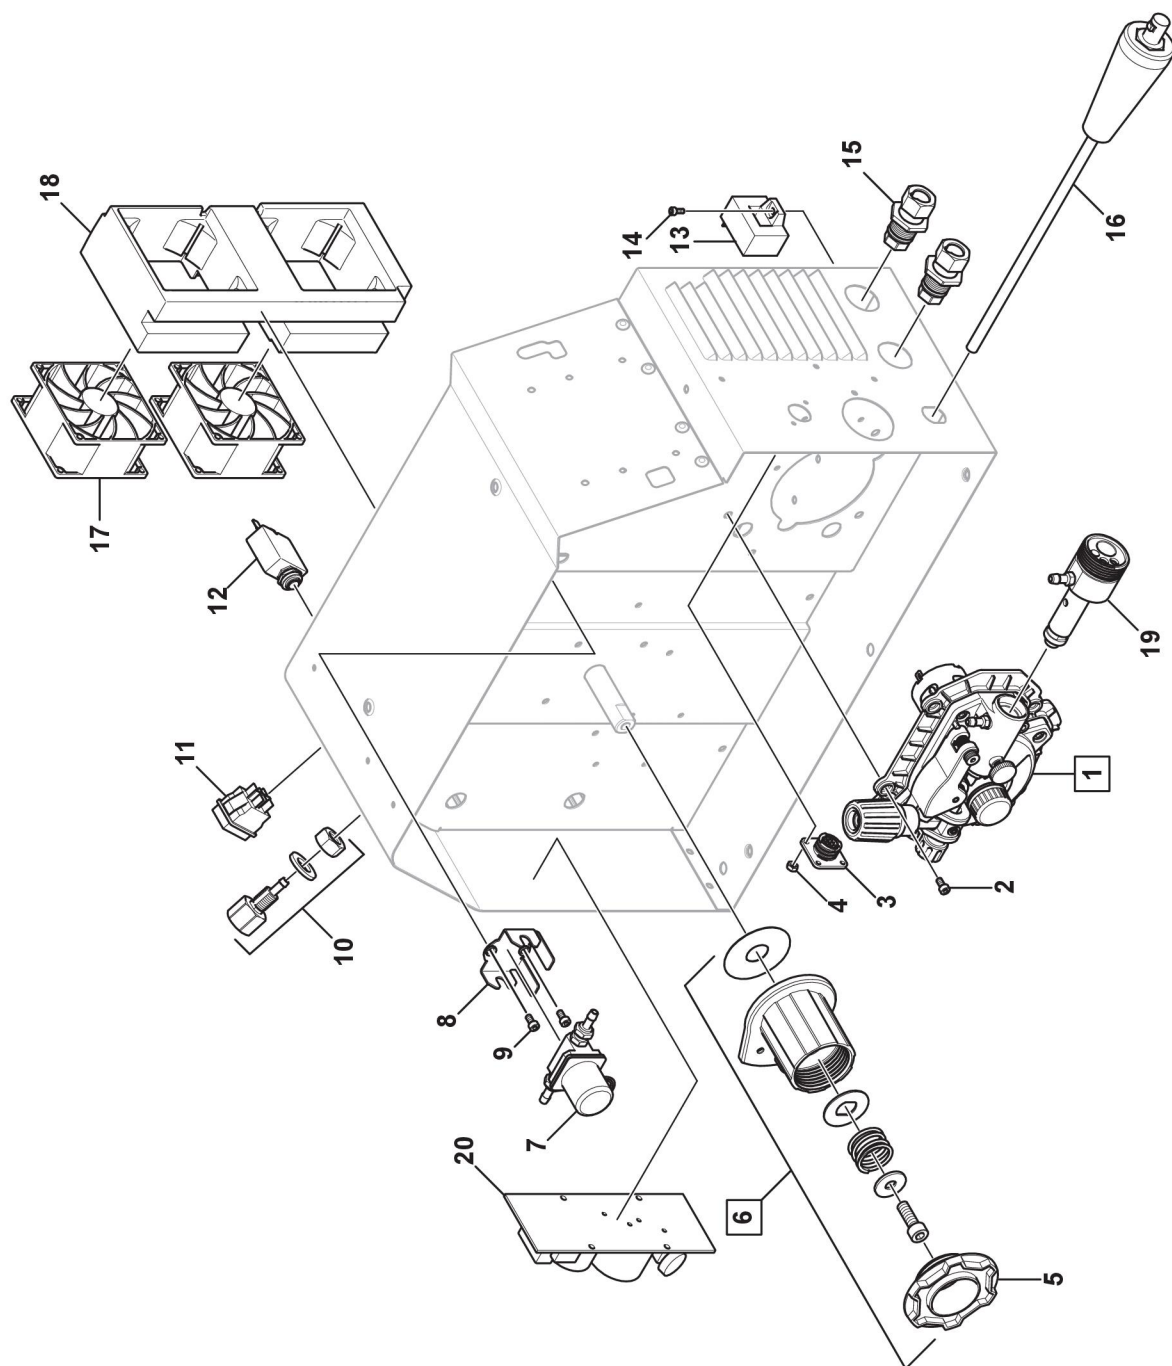

User interface

C = Component designation in circuit diagram


EM 215ic

Item	Qty	Ordering no.	Denomination	Notes	C
1	1	0558 102 486	User interface complete		
2	1	0558 102 423	Knob encoder with retaining ring		
3	1	0558 102 487	WF Pot Assembly		
4	1	0558 102 440	Knob, small		
5	2	0558 102 489	WF Pot Knob		
6	1	0558 102 488	Process Select Knob		



EMP 215ic, EMS 215ic

Item	Qty	Ordering no.	Denomination	Notes	C
1	1	0558 102 422	EMP215ic panel assembly	CSA	
	1	0464 590 880	EMP215ic panel assembly	CE	
	1	0558 102 485	EMS215ic panel assembly	CSA	
2	2	0558 102 423	Encoder for small knob		
3	1	0558 102 424	Encoder for large knob		
4	1	0558 102 438	Replaceable display lens		
5	2	0558 102 440	Knob, small		
6	1	0558 102 441	Knob, large		
7	1	0558 102 437	EMP215ic lens assembly kit		
	1	0558 102 484	EMS215ic lens assembly kit		

EM 215ic

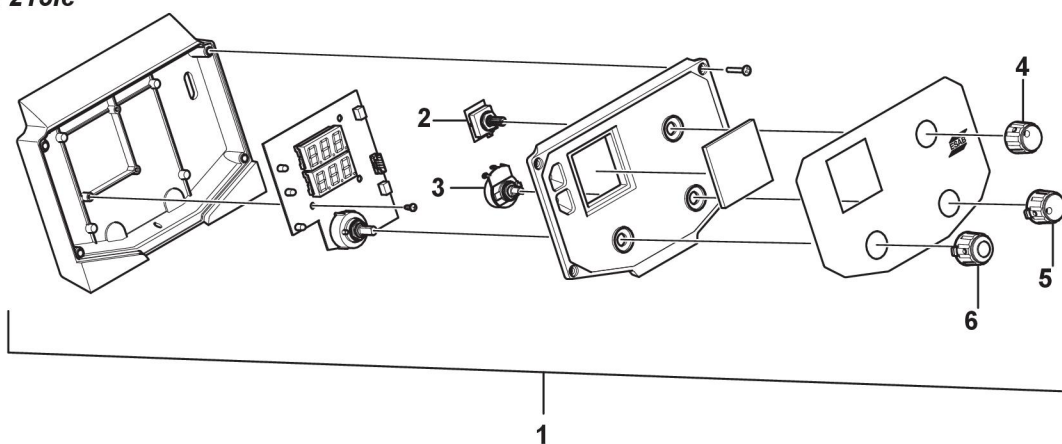


EMP 215ic / EMS 215ic

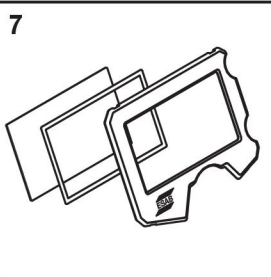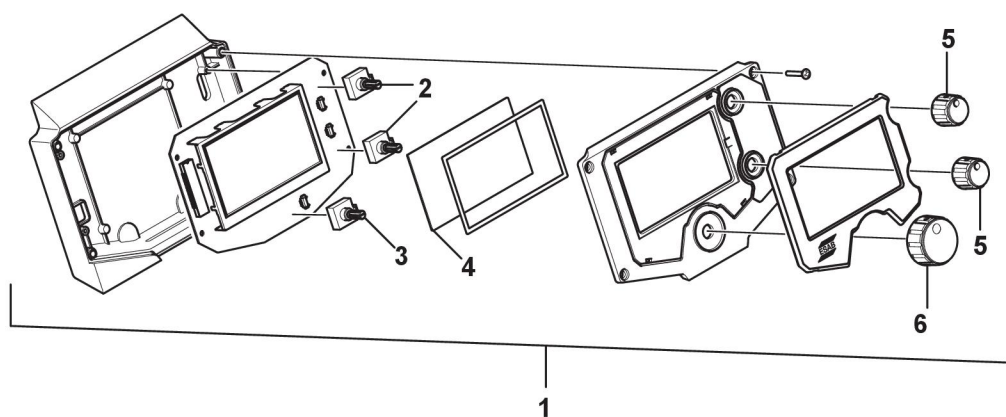

Control modules


C = Component designation in circuit diagram

Item	Qty	Ordering no.	Denomination	Notes	C
1	1	0558 102 426	PCB Power board assembly	CSA	
	1	0464 591 880	PCB Power board assembly	CE	
2	1	0558 102 427	PCB Control board complete	CSA	
	1	0464 592 880	PCB Control board complete	CE	
3	1	0558 102 428	Main transformer with NTC (3x)		
4	1	0558 102 429	Output diode assembly		
5	1	0558 102 430	Output inductor assembly		
6	1	0558 102 431	PFC inductor assembly		
7	1	0558 102 432	Strain relief assembly assembly		
8	1	0558 102 433	Mains cable complete	CSA only	
9	1	0558 102 434	Warning label	Not included in illustration	

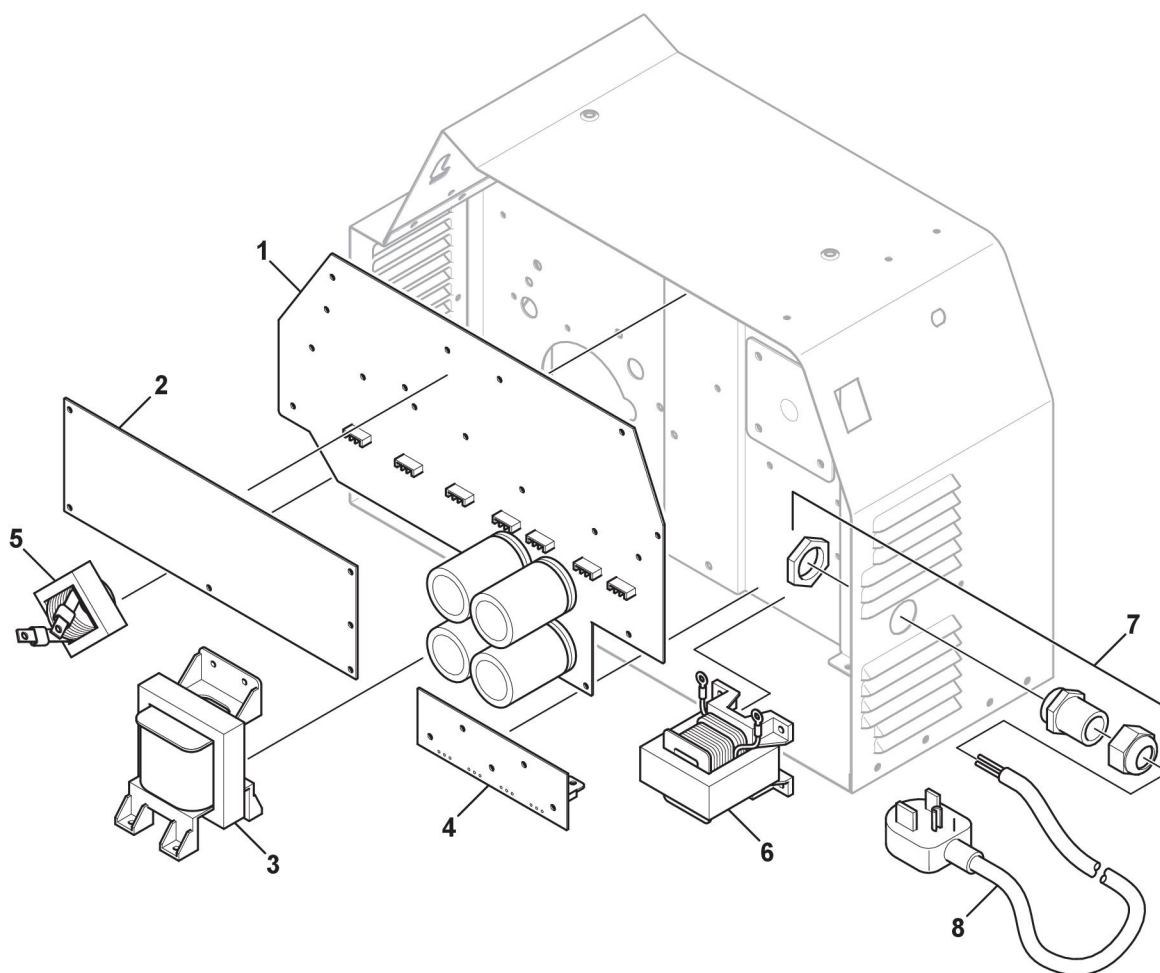


WEAR PARTS - CSA

Item	Ordering no.	Denomination	Wire type	Wire dimensions
1	0558 102 326	Wire outlet guide	Fe/SS/Flux Cored	0.030" / 0.035" / 0.045" (0.8 mm / 0.9 mm / 1.2 mm)
	0558 102 327	Wire outlet guide	Fe/SS/Flux Cored	0.024" (0.6 mm)
2	0558 102 328	Wire inlet guide	Fe/SS/Flux Cored	0.024" / 0.030" / 0.035" / 0.045" (0.6 mm / 0.8 mm / 0.9 mm / 1.2 mm)
3	0558 102 334	Key-drive shaft	N/A	N/A
4	7977036	Feed roll "V" groove	Fe/SS	0.024" / 0.030" (0.6 mm / 0.8 mm)
	W4014800	Feed roll "V" groove	Fe/SS	0.024" / 0.035" (0.6 mm / 0.9 mm)
	7977732	Feed roll "V" knurled	Flux Cored	0.030" / 0.035" (0.8 mm / 0.9 mm)
	7044277	Feed roll "V" knurled	Flux Cored	0.045" (1.1 mm)
5	0558 102 329	Locking knob	N/A	N/A
6	0558 102 331	Pressure arm complete assembly	N/A	N/A
7	0558 102 330	Screw	N/A	N/A
8	0558 102 332	MIG gun locking knob	N/A	N/A

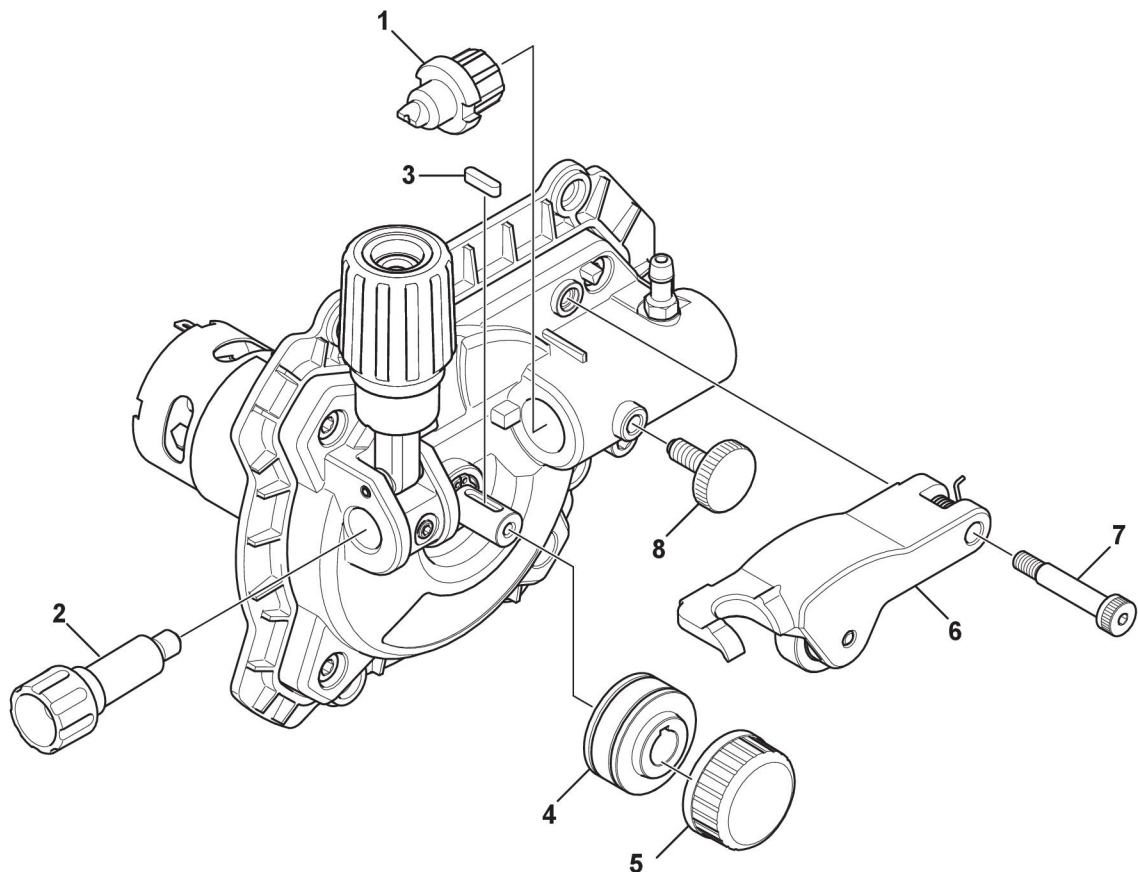

WEAR PARTS - CE

Item	Ordering no.	Denomination	Wire type	Wire dimensions
1	0558 102 460	Wire outlet guide steel	Fe/SS/Flux Cored	1.0 mm – 1.2 mm (0.040 in. – 0.045 in.)
	0558 102 461	Wire outlet guide steel	Fe/SS/Flux Cored	0.6 mm – 0.8 mm (0.023 in. – 0.030 in.)
	0464 598 880	Wire outlet guide teflon	Aluminium	1.0 mm – 1.2 mm (0.040 in. – 0.045 in.)
2	0558 102 328	Wire inlet guide	Fe/SS/Flux Cored	0.6 mm / 0.8 mm / 0.9 mm / 1.2 mm (0.023 in. / 0.030 in. / 0.035 in. / 0.045 in.)
3	0191 496 114	Key-drive shaft crescent	N/A	N/A
4	0367 556 001	Feed roll "V" groove	Fe/SS/Flux Cored	0.6 mm / 0.8 mm (0.023 in. / 0.030 in.)
	0367 556 002	Feed roll "V" groove	Fe/SS/Flux Cored	0.8 mm / 1.0 mm (0.030 in. / 0.040 in.)
	0367 556 003	Feed roll "V" knurled	Fe/SS/Flux Cored	1.0 mm / 1.2 mm (0.040 in. / 0.045 in.)
	0367 556 004	Feed roll "U" groove	Aluminium	1.0 mm / 1.2 mm (0.040 in. / 0.045 in.)
5	0558 102 329	Locking knob	N/A	N/A
6	0558 102 331	Pressure arm complete assembly	N/A	N/A
7	0558 102 330	Screw	N/A	N/A
8	0558 102 459	Euro adapter locating screw	N/A	N/A

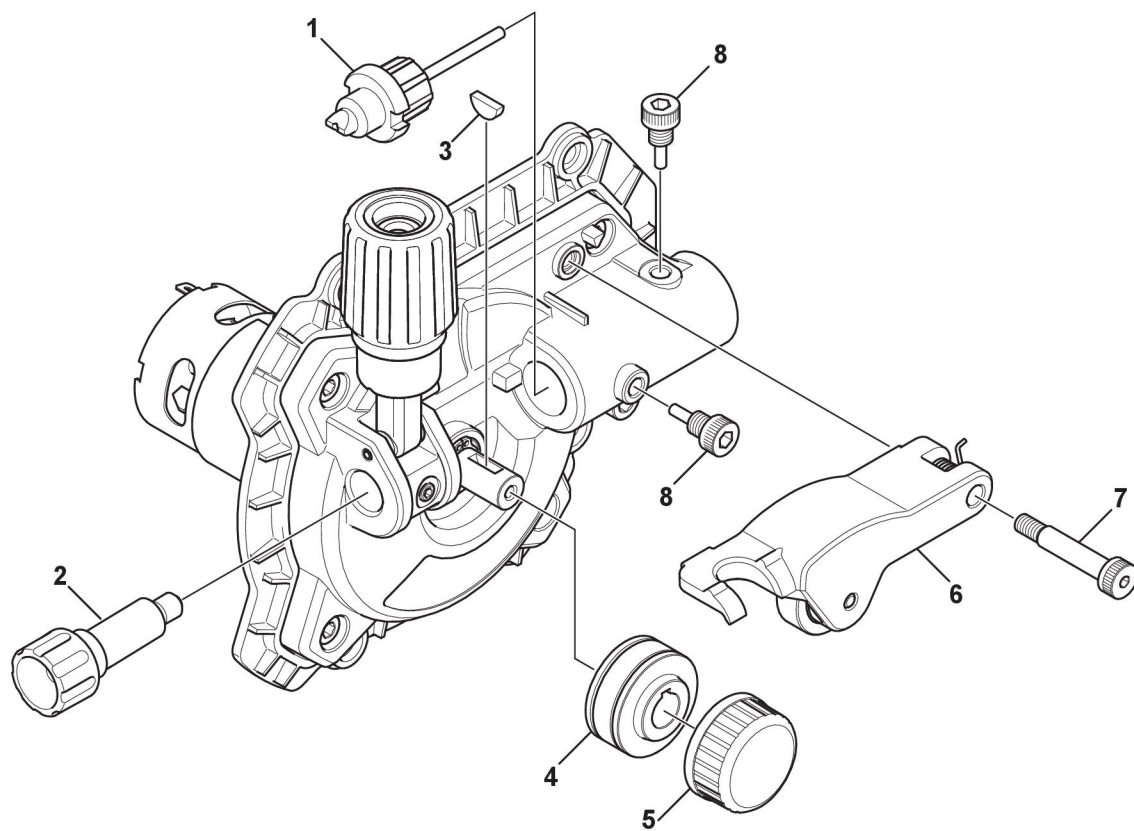

ESAB subsidiaries and representative offices

Europe

AUSTRIA

ESAB Ges.m.b.H
Vienna-Liesing
Tel: +43 1 888 25 11
Fax: +43 1 888 25 11 85

BELGIUM

S.A. ESAB N.V.
Heist-op-den-Berg
Tel: +32 15 25 79 30
Fax: +32 15 25 79 44

BULGARIA

ESAB Kft Representative Office
Sofia
Tel: +359 2 974 42 88
Fax: +359 2 974 42 88

THE CZECH REPUBLIC

ESAB VAMBERK s.r.o.
Vamberk
Tel: +420 2 819 40 885
Fax: +420 2 819 40 120

DENMARK

Aktieselskabet ESAB
Herlev
Tel: +45 36 30 01 11
Fax: +45 36 30 40 03

FINLAND

ESAB Oy
Helsinki
Tel: +358 9 547 761
Fax: +358 9 547 77 71

GREAT BRITAIN

ESAB Group (UK) Ltd
Waltham Cross
Tel: +44 1992 76 85 15
Fax: +44 1992 71 58 03

ESAB Automation Ltd
Andover

Tel: +44 1264 33 22 33
Fax: +44 1264 33 20 74

FRANCE

ESAB France S.A.
Cergy Pontoise
Tel: +33 1 30 75 55 00
Fax: +33 1 30 75 55 24

GERMANY

ESAB Welding & Cutting GmbH
Langenfeld
Tel: +49 2173 3945-0
Fax: +49 2173 3945-218

HUNGARY

ESAB Kft
Budapest
Tel: +36 1 20 44 182
Fax: +36 1 20 44 186

ITALY

ESAB Saldatura S.p.A.
Bareggio (Mi)
Tel: +39 02 97 96 8.1
Fax: +39 02 97 96 87 01

THE NETHERLANDS

ESAB Nederland B.V.
Amersfoort
Tel: +31 33 422 35 55
Fax: +31 33 422 35 44

NORWAY

AS ESAB
Larvik
Tel: +47 33 12 10 00
Fax: +47 33 11 52 03

POLAND

ESAB Sp. z o.o.
Katowice
Tel: +48 32 351 11 00
Fax: +48 32 351 11 20

PORTUGAL

ESAB Lda
Lisbon
Tel: +351 8 310 960
Fax: +351 1 859 1277

ROMANIA

ESAB Romania Trading SRL
Bucharest
Tel: +40 316 900 600
Fax: +40 316 900 601

RUSSIA

LLC ESAB
Moscow
Tel: +7 (495) 663 20 08
Fax: +7 (495) 663 20 09

SLOVAKIA

ESAB Slovakia s.r.o.
Bratislava
Tel: +421 7 44 88 24 26
Fax: +421 7 44 88 87 41

SPAIN

ESAB Ibérica S.A.
San Fernando de Henares
(MADRID)
Tel: +34 91 878 3600
Fax: +34 91 802 3461

SWEDEN

ESAB Sverige AB
Gothenburg
Tel: +46 31 50 95 00
Fax: +46 31 50 92 22

ESAB International AB

Gothenburg
Tel: +46 31 50 90 00
Fax: +46 31 50 93 60

SWITZERLAND

ESAB Europe GmbH
Baar
Tel: +41 1 741 25 25
Fax: +41 1 740 30 55

UKRAINE

ESAB Ukraine LLC
Kiev
Tel: +38 (044) 501 23 24
Fax: +38 (044) 575 21 88

North and South America

ARGENTINA

CONARCO
Buenos Aires
Tel: +54 11 4 753 4039
Fax: +54 11 4 753 6313

BRAZIL

ESAB S.A.
Contagem-MG
Tel: +55 31 2191 4333
Fax: +55 31 2191 4440

CANADA

ESAB Group Canada Inc.
Mississauga, Ontario
Tel: +1 905 670 0220
Fax: +1 905 670 4879

MEXICO

ESAB Mexico S.A.
Monterrey
Tel: +52 8 350 5959
Fax: +52 8 350 7554

USA

ESAB Welding & Cutting
Products
Florence, SC
Tel: +1 843 669 4411
Fax: +1 843 664 5748

Asia/Pacific

AUSTRALIA

ESAB South Pacific
Archerfield BC QLD 4108
Tel: +61 1300 372 228
Fax: +61 7 3711 2328

CHINA

Shanghai ESAB A/P
Shanghai
Tel: +86 21 2326 3000
Fax: +86 21 6566 6622

INDIA

ESAB India Ltd
Calcutta
Tel: +91 33 478 45 17
Fax: +91 33 468 18 80

INDONESIA

P.T. ESABindo Pratama
Jakarta
Tel: +62 21 460 0188
Fax: +62 21 461 2929

JAPAN

ESAB Japan
Tokyo
Tel: +81 45 670 7073
Fax: +81 45 670 7001

MALAYSIA

ESAB (Malaysia) Snd Bhd
USJ
Tel: +603 8023 7835
Fax: +603 8023 0225

SINGAPORE

ESAB Asia/Pacific Pte Ltd
Singapore
Tel: +65 6861 43 22
Fax: +65 6861 31 95

SOUTH KOREA

ESAB SeAH Corporation
Kyungnam
Tel: +82 55 269 8170
Fax: +82 55 289 8864

UNITED ARAB EMIRATES

ESAB Middle East FZE
Dubai
Tel: +971 4 887 21 11
Fax: +971 4 887 22 63

Africa

EGYPT

ESAB Egypt
Dokki-Cairo
Tel: +20 2 390 96 69
Fax: +20 2 393 32 13

SOUTH AFRICA

ESAB Africa Welding & Cutting
Ltd
Durbanvill 7570 - Cape Town
Tel: +27 (0)21 975 8924

Distributors

*For addresses and phone
numbers to our distributors in
other countries, please visit our
home page*

www.esab.com



www.esab.com

